

VULCAN
*CATALOG OF
REPLACEMENT PARTS*

ELECTRIC SALAMANDER BROILER

MODEL


36ESB



For additional information on Vulcan-Hart or to locate an authorized parts and service provider in your area, visit our website at www.vulcanequipment.com

Table of Contents


5 PANELS AND COVERS
7 RACK LIFTING COMPONENTS
9 ELECTRIC CONTROLS AND HEATING COMPONENTS

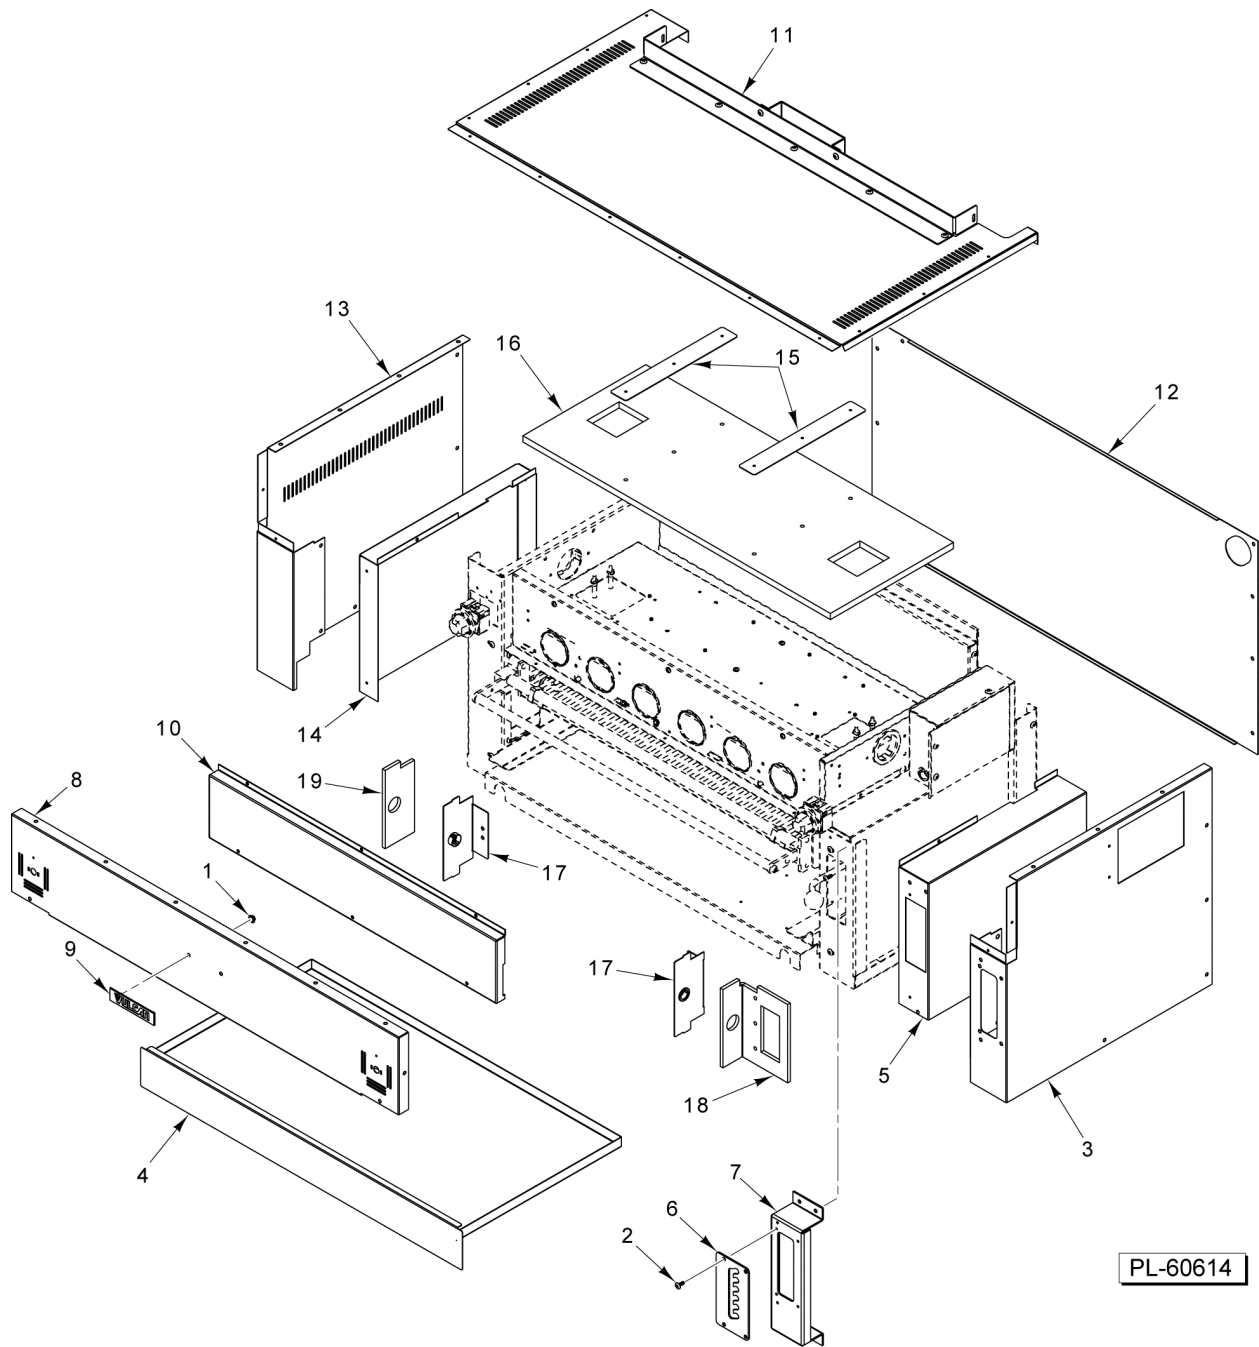

PANELS AND COVERS

PANELS AND COVERS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60614			
1	NS-047-78	Pal Nut.....	2
2	00-730228	Self-Tapping Screw 10-24 x 1/2 Phil. Truss Hd.....	AR
3	00-922717-00002	Panel - Side (RH).....	1
4	00-922732-0000A	Tray - Crumb.....	1
5	00-922736	Shield - Heat (Internal) (RH).....	1
6	00-922738	Plate - Stop (Rack Position).....	1
7	00-922737	Bracket.....	1
8	00-922719-00002	Panel - ESB Switch.....	1
9	00-957916-00003	Nameplate - Small (Vulcan).....	1
10	00-753383-0000A	Panel - Insulation.....	1
11	00-922715-0000A	Top Panel Assy.....	1
12	00-922740	Panel - Back.....	1
13	00-922718-00002	Panel - Side (LH).....	1
14	00-788488	Shield - Heat (Internal) (LH).....	1
15	00-922808	Retainer - Housing Insulation.....	2
16	00-922807	Insulation - Element Housing.....	1
17	00-922791	Bracket - Housing Insulation.....	2
18	00-922805	Insulation.....	1
19	00-922806	Insulation.....	1

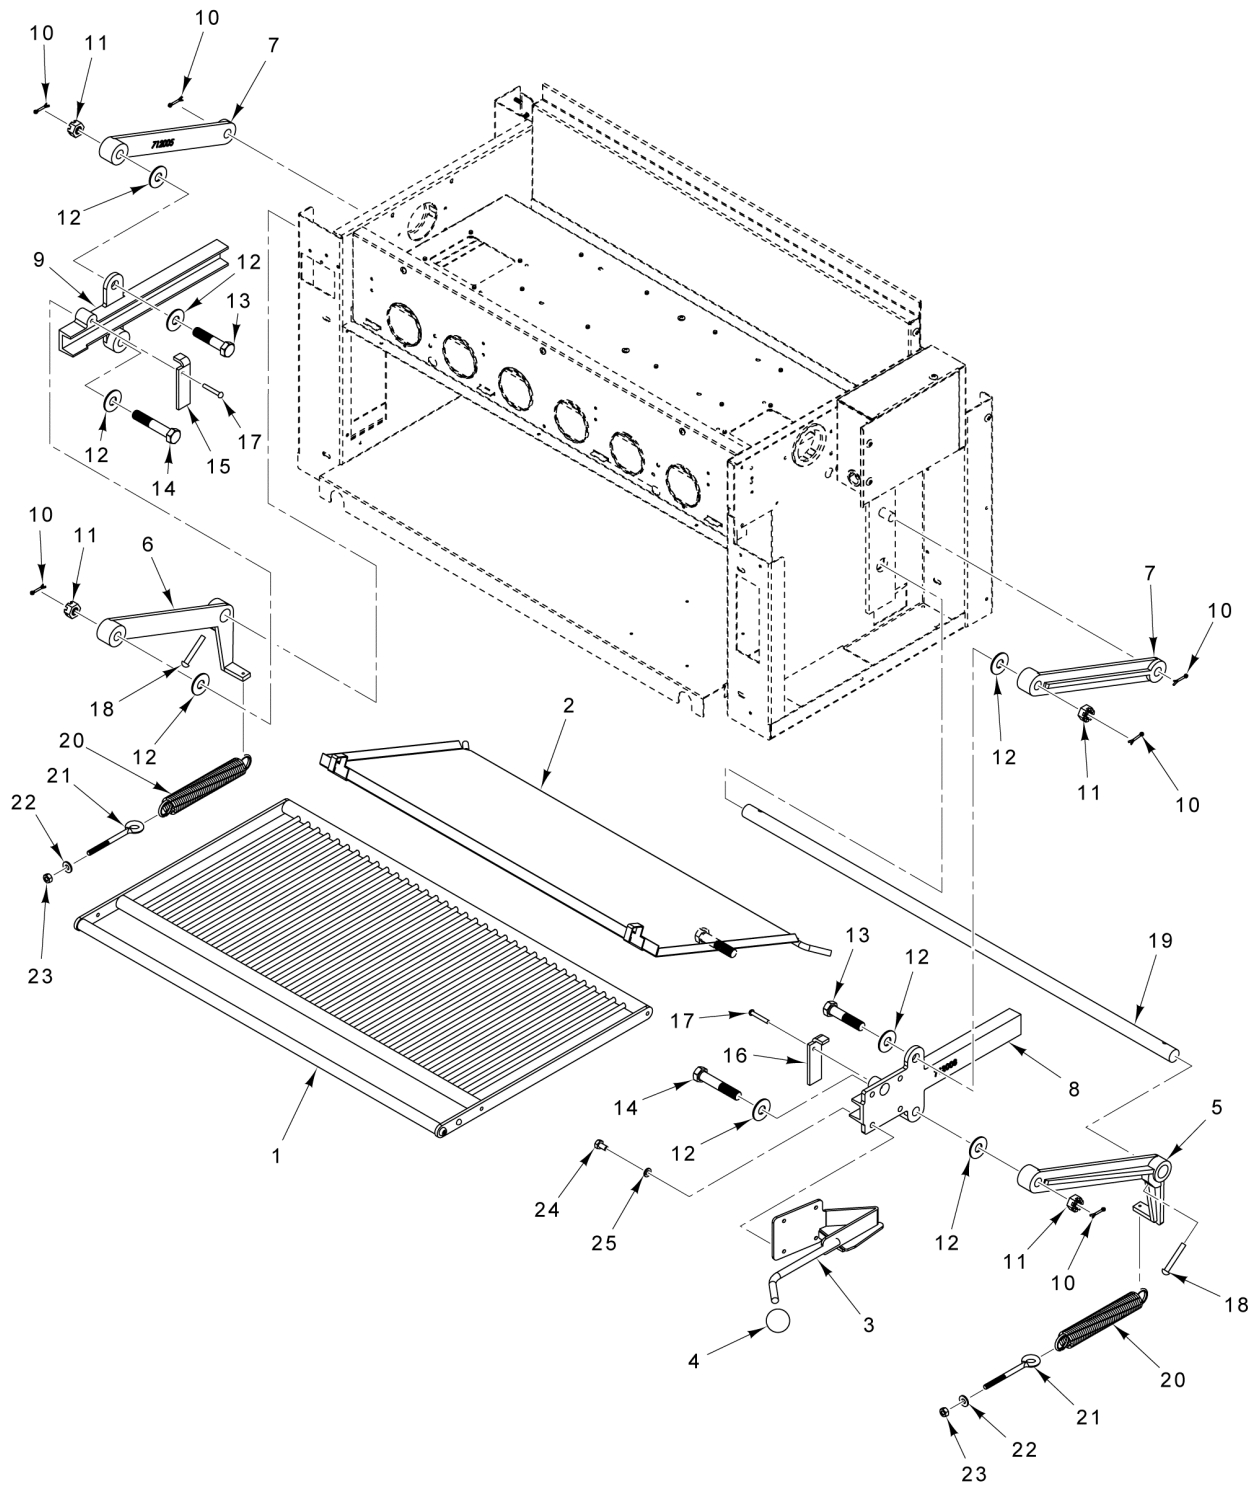


PL-60615

RACK LIFTING COMPONENTS

RACK LIFTING COMPONENTS

ILLUS. PL-60615	PART NO.	NAME OF PART	AMT.
1	00-702317-0000A	Rack Assy.....	1
2	00-702319-0000A	Pan - Sliding.....	1
3	00-922734-000A2	Bracket - Rack Positioning.....	1
4	00-922331	Knob (1-1/2 In. Dia.).....	1
5	00-712006	Arm - Lower Right.....	1
6	00-712007	Arm - Lower Left.....	1
7	00-712005	Arm - Upper.....	2
8	00-712008	Slide - Rack (RH).....	1
9	00-712009	Slide - Rack (LH).....	1
10	PC-005-10	Pin - Cotter.....	6
11	00-730520	Nut - Castle.....	4
12	00-730318	Washer.....	8
13	00-730124	Screw.....	2
14	00-730125	Screw.....	2
15	00-702041	Stop - Rack (LH).....	1
16	00-702040	Stop - Rack (RH).....	1
17	00-730405	Screw.....	2
18	00-730425	Screw.....	2
19	00-702055	Rod - Spreader.....	1
20	00-712017	Spring - Rack.....	2
21	00-719331	Bolt - Eye.....	2
22		Lockwasher 1/4.....	2
23		Nut 1/4-20 Hex.....	2
24		Mach. Screw 1/4-20 x 1/2.....	4
25		Lockwasher 1/4 Helical.....	4

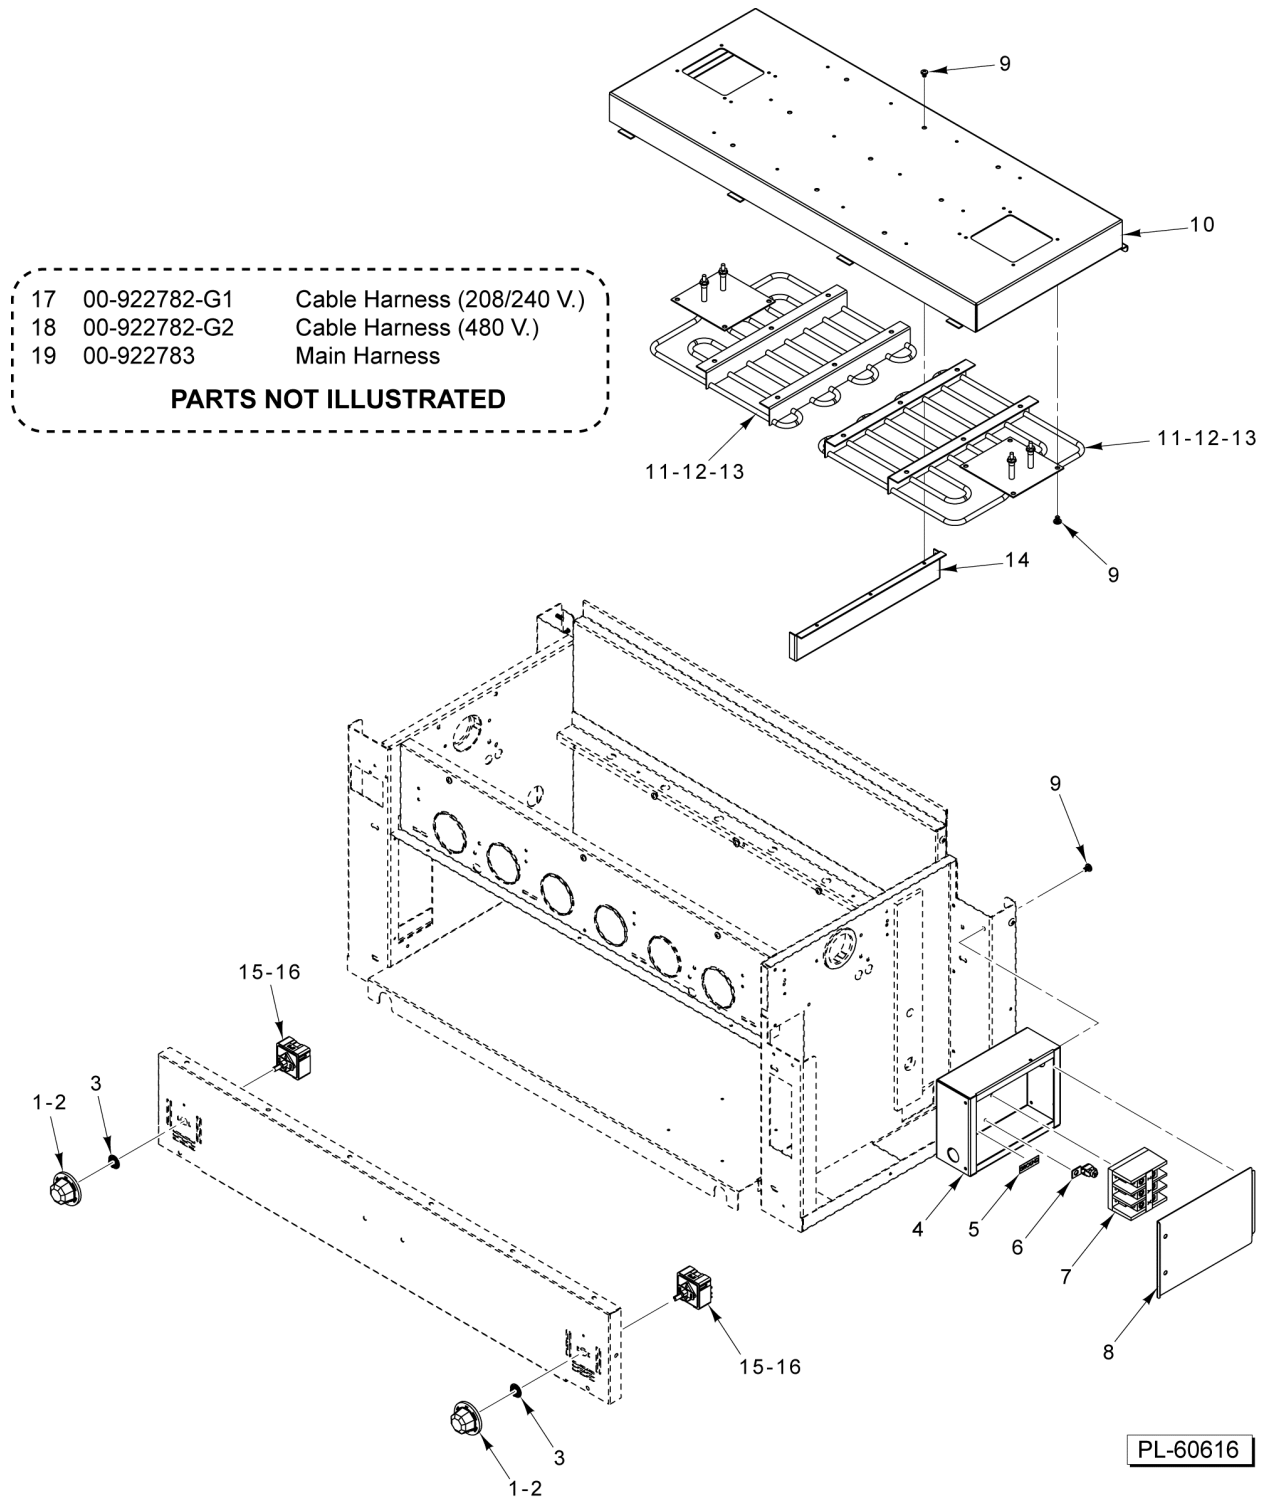

ELECTRIC CONTROLS AND HEATING COMPONENTS

ELECTRIC CONTROLS AND HEATING COMPONENTS

ILLUS. PL-60616	PART NO.	NAME OF PART	AMT.
1	00-927603-00001	Knob - Infinite Switch (208/240 V.).....	2
2	00-927607	Knob - Switch (4-Position) (480 V.).....	2
3	NS-047-80	Lock Nut 3/8-24 Hex.....	2
4	00-922768	Box - Terminal.....	1
5	00-410711-000D1	Decal - Ground.....	1
6	00-417856-00001	Lug - Grounding (With Set Screw).....	1
7	00-410472-00008	Block - Terminal (3-Pole).....	1
8	00-922769	Cover - Terminal Box.....	1
9	00-730029-00001	Screw.....	AR
10	00-922765	Housing - Heating Element.....	1
11	00-922767-0A208	Element (2.25 kW) (208 V.).....	2
12	00-922767-0A240	Element (2.25 kW) (240 V.).....	2
13	00-922767-0A480	Element (2.25 kW) (480 V.).....	2
14	00-922766	Bracket - Housing Stiffener.....	1
15	00-411503-00004	Switch - Infinite Switch (208/240 V.).....	2
16	00-355798-00001	Switch (4-Position) (480 V.).....	AR
17	00-922782-G1	Cable Harness (208/240 V.).....	2
18	00-922782-G2	Cable Harness (480 V.).....	2
19	00-922783	Main Harness.....	1

